


Display Instruction

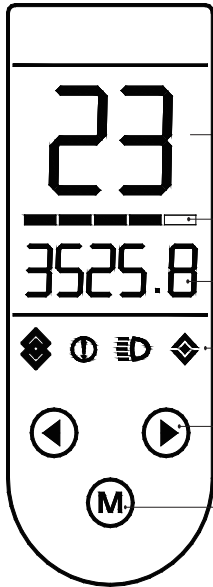

Speed

Battery

Total Milage

Function

Foot Assistance Mode : 3 levels for choose left for reduction, right for rise.

Front Light: Control the front light

说明:

Speed: Show speed when riding.


Battery: Show rest battery power.

Total Milage: Show Err code when fault occurs.


Function:  Bluetooth connection

 Fault Alarm

 Front Light

 Low speed mode under low battery power

Fault Alarm Instruction :

If there is failure on the ivelo ebike, display will show “” and alarm, “Total Milage” will show a Err Code as follows :

Err01: Motor Fault Err02: Right Throttle Lever Fault Err03: Left Brake Lever Fault
 Err04: Motor Motor Blocking Err08: Low Battery power Err10: Wire Connection Fault
 Err11: Controller Fault

(If display show the Err code and alarm, please contact local dealer/seller/service staff for solution.)